 




Operating Instructions FM Radio Alarm Clock with Weather Report Model: DG-FR100

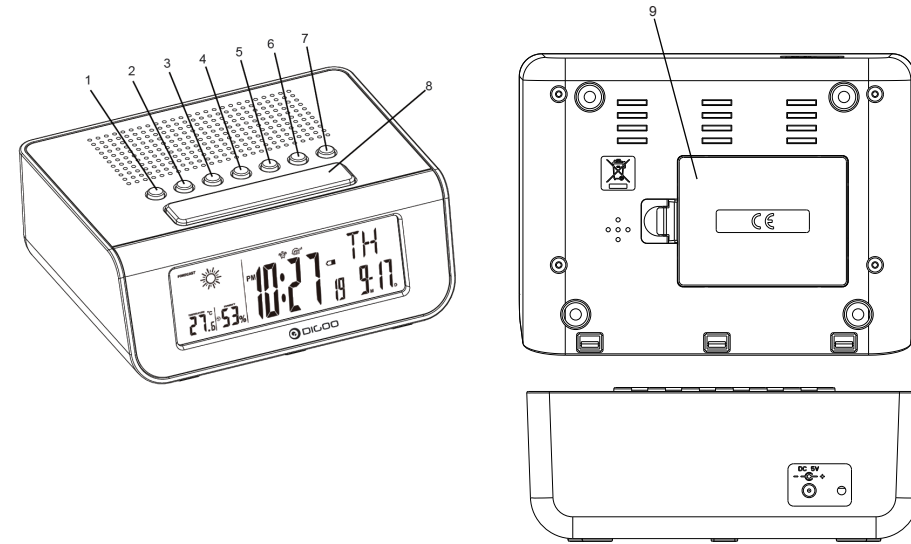

BUTTON

1. DOWN
2. UP
3. SET
4. MODE
5. VOL-

6. VOL+
7. RADIO ON/OFF
8. SNOOZE-LIGHT
9. BATTERY COVER

FEATURES

- * FM (87.0 Mhz-108.0 Mhz) Radio
- * Radio sleep
- * Weather forecast
- * Indoor temperature and humidity
- * Time display in 12 or 24H format
- * Dual-alarm (clock wake up and radio wake up) and snooze
- * 8 languages weekday display: English, German, French, Spanish, Italian, Dutch, Denmark and Russian
- * Built-in calendar
- * Low power indicator
- * Operated with 3 x AA batteries (not included) or USB cable (included)

POWERING ON

Open the battery compartment cover and insert 3xAA batteries according to the correct polarity showed in the compartment or connect by the USB cable included.

TIME SETTING

At normal time displaying mode, hold pressing 'SET' button for seconds till entering time setting mode, and the setting digit will flash. Press 'UP' or 'DOWN' button to adjust. Hold 'UP' or 'DOWN' button for seconds, the flashing digit will move faster. The setting order is hour → minute → 12/24 hr → year → month → date → language of day → exit. Press 'SET' button again to confirm the setting. If there is no more operation in 1 minute, it will save the existing setting and turn to normal displaying mode.

ALARM & SNOOZE SETTING

Clock Wake Up

At normal time displaying mode, press 'MODE' button once to enter alarm mode. Hold pressing 'SET' button for seconds till entering alarm setting mode, and the setting digit will flash. Press 'UP' or 'DOWN' button to adjust. Hold pressing 'UP' or 'DOWN' button for seconds, the flashing digit will move faster. Press 'SET' button again to confirm the setting. Press 'UP' button to turn on or off the alarm function, and if the alarm is on, there is a signal of on the screen. If there is no more operation in 1 minute, it will save the existing setting and turn to normal displaying mode.

SNOOZE FUNCTION

Press 'SNOOZE-LIGHT' button to turn off the alarm sound when it is on. The signal of is showing on the screen. The alarm will be on again after 5 minutes. Press any other button to turn off the snooze function. Or press any other button except 'SNOOZE-LIGHT' button to turn off the alarm sound when it is on, and the alarm will be on again after 24 hours.

Radio Wake Up

At normal time displaying mode, press 'MODE' button twice to enter the mode of radio wake up. Hold pressing 'SET' button for seconds till entering 'radio wake up' setting mode, and the setting digit will flash. Press 'UP' or 'DOWN' button to adjust. Holding pressing 'UP' or 'DOWN' for seconds, the flashing digit will move faster. Press 'UP' button to turn on the radio wake up function, and there is a signal of on the screen. If there is no more operation in 1 minute, it will save the existing setting and turn to normal displaying mode or press 'SET' button again to confirm the setting.

When the alarm time is on, the radio will be turned on at the setting frequency. (The setting frequency refers to radio setting.)

LANGUAGE OF WEEKDAY

The setting order is English → German → French → Spanish → Italian → Dutch → Danish → Russian

Country	English	German	French	Spanish	Italian	Dutch	Danish	Russian
Abbreviation	EN	GE	FR	ES	IT	NE	DA	RU
Sunday	SU	SO	DI	DO	DO	ZO	SO	BC
Monday	MO	MO	LU	LU	LU	MA	MA	PH
Tuesday	TU	DI	MA	MA	MA	DI	TI	BT
Wednesday	WE	MI	ME	MI	ME	WO	ON	cp
Thursday	TH	DO	JE	JU	GI	DO	TO	4T
Friday	FR	FR	VE	VI	VE	VR	FR	nT
Saturday	SA	SA	SA	SA	SA	ZA	LO	сб

RADIO SETTING

FM Radio

Press 'RADIO ON/OFF' button to turn the radio on. Press 'UP' or 'DOWN' button for seconds, it will start to search frequency automatically. When a signal is found, it will stop searching and broadcast. Press 'VOL-' or 'VOL+' to adjust the volume. Press 'RADIO ON/OFF' once to turn off the radio and turn back to normal time displaying mode.

Radio memo

At your favorite frequency, press 'SET' button once and press 'UP' or 'DOWN' button to choose the memo number which you want to record. Press 'SET' to confirm. It can record 30 memos in total. When turn on radio mode next, press 'SET' button once, then press 'UP' or 'DOWN' button to choose the memo number which recorded before. your recorded favorite frequency directly in memo and the line under the corresponding memo will be flashing. When the power is off, the memo will be lost.

Radio Sleep

When playing radio, hold pressing 'SNOOZE-LIGHT' button to enter into sleep mode. Press 'UP' or 'DOWN' button to choose the sleep time. The setting order is 00 → 5 → 10 → 15 → ... → 90 → 00. If the radio sleep mode is on, there is a signal of on the screen. When choose '00', the radio sleep function is off. When the alarm time is on, the radio sound will be turned on at the volume of level 2. It will be gradually increased at volume 2 in each 10 seconds. When the volume level reaches 12, it will stop increasing.

Radio wake up

First, choose your favourite frequency for waking you up. Hold pressing 'MODE' button till the frequency and the signal of is flashing. Press 'MODE' button again to confirm the setting. When the alarm time is on, the selected frequency will be broadcasting.

THERMOMETER, HYGROMETER & WEATHER STATION

The temperature and the humidity are measured in every minute.

Range

Temperature: 0°C ~ 50°C -- If the temperature is out of range, the temperature will display LL.L C / F (lower) or HH.H C / F (higher).

Humidity: 20% ~ 90% -- If the temperature is out of range, the humidity will display LL % (lower) or HH % (higher).

Comfortable Level Indication

dry : when the humidity is less than 40%, it will display. (at any temperature)

comfortable : at the temperature range of 20°C to 25°C and the humidity range is between 40% to 70%, it will display.

wet : when the humidity is higher than 70%, it will display. (at any temperature)

If the temperature is not in the range of 20°C to 25°C and the humidity range is between 40% to 70%, it will not display any symbol.

Weather Forecast

The weather forecast will display in one of the following four combinations:

	SUNNY		SOMETIMES SUNNY & SOMETIMES CLOUDY
	CLOUDY		RAINY

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This will damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.